


INSTALLATION MANUAL



SL

HIGH SIDE TIE-IN - SIDEWALL WITH WALL PANELS

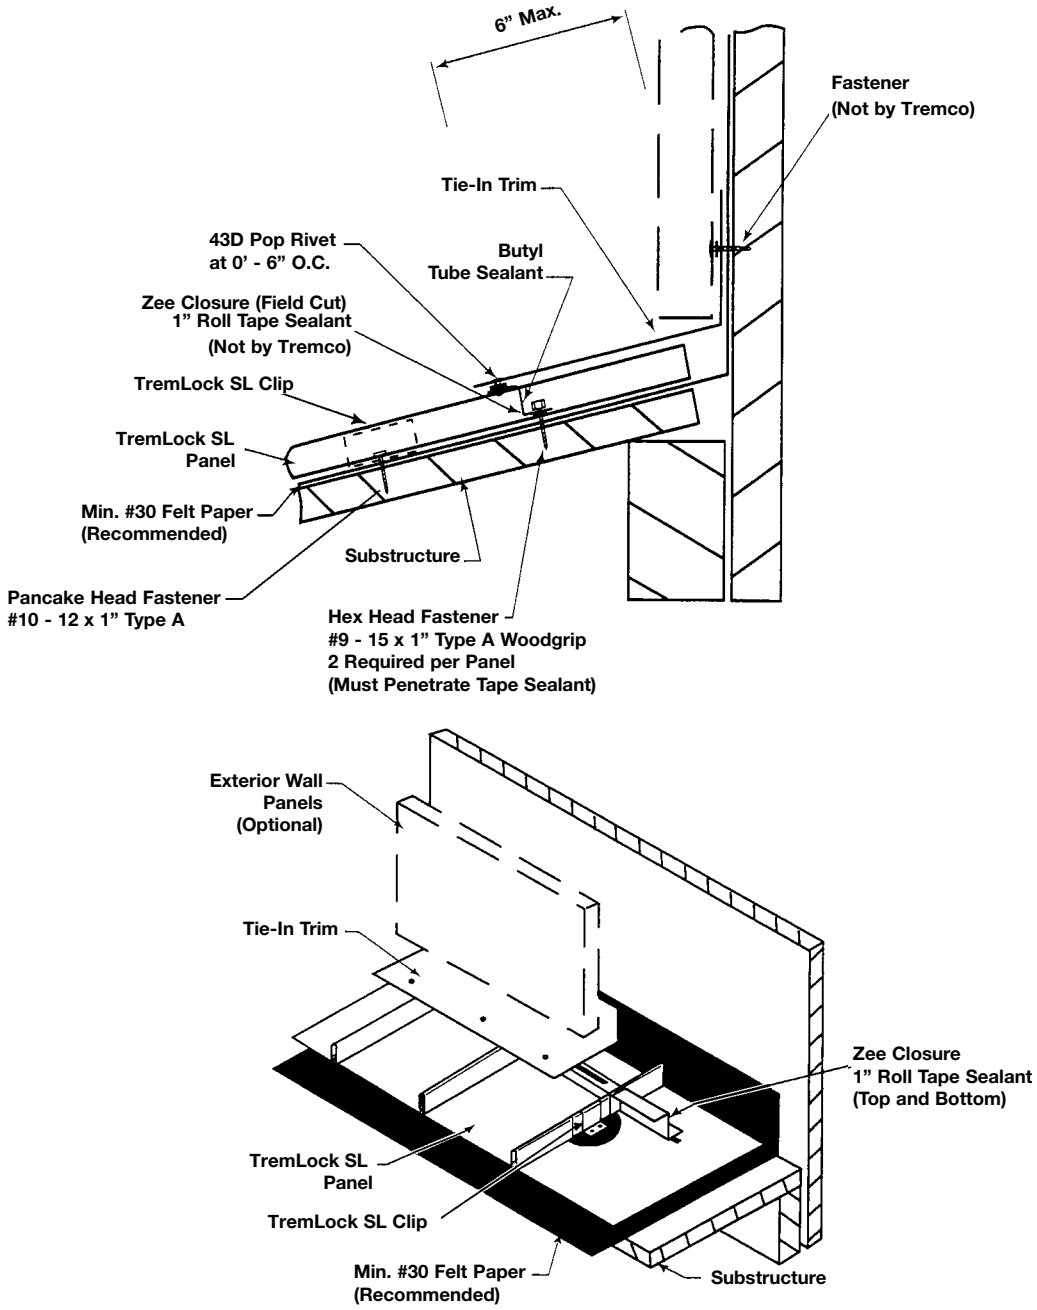


NOTES:

- After panels are installed, place a continuous run of 1" roll tape sealant approximately 6" from edge of wall substructure.
- Field cut zee closure and install over tape sealant and attach with two (2) #9 -15 x 1" fasteners through closure, sealant, panel and into substructure. Locate as shown.
- Apply tube sealant to zee closure and panel ribs.
- Apply a continuous run of 1" roll tape sealant over zee closure and fasten trim to closure with 43D pop rivet on 6" centers. Use tube sealant at closure.

x Fasteners for attachment to wall substructure are not by /i V , v .

TremLock SL

ROOF JACK INSTALLATION

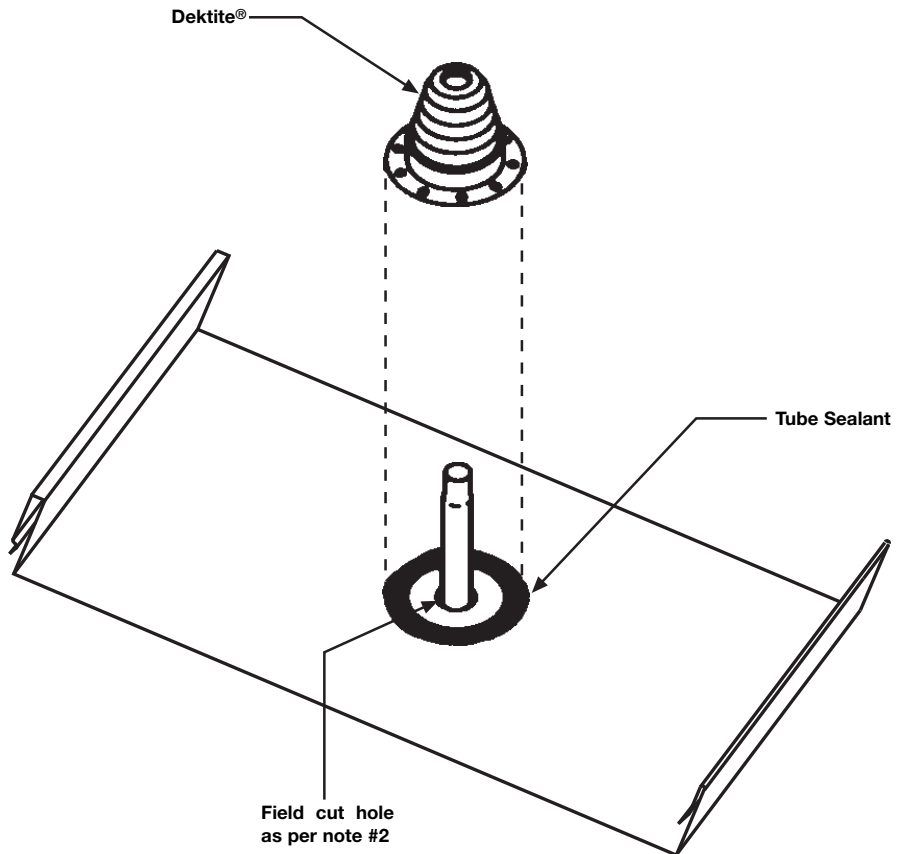

NOTES:

1. Before cutting hole in sheet, consider the best position to suit size of Dektite® selected.
2. Cut a neat hole with minimum clearance for pipe and install pipe.
3. Rubber sleeve should be a watertight fit on pipe. If rubber has to be cut, a neat hole 1/2" dia. less than outside pipe diameter should be cut in Dektite®. Use a sharp pair of scissors and avoid nicks.
4. Apply tube sealant to underside of base and, using water as lubricant, slide flashing along until it meets sheet.
5. Hand press Dektite® base on to sheet, pressing base firmly to sheet to avoid gaps, progressively drill and fasten to sheet. Fasten to panel with 1/4 - 14 x 7/8" LAPTEK ZAC Fasteners.





www.tremcoroofing.com

3735 Green Road • Beachwood, Ohio 44122 • 1.800.852.6013

50 Beth Neelson Drive • Toronto, Ontario M4H 1M6 • 1.800.668.9879



???

8/10/18