


NOTES

1. INSTALL 16 GAUGE BACK-UP PLATE ON UPPER END OF LOWER PANELS.
2. USE TEMPORARY FASTENERS TO HOLD BACK-UP PLATES.
3. SEALANT SHALL BE APPLIED BETWEEN PANELS AND SECURED WITH FASTENERS THROUGH THE CINCH STRAP, PANELS AND INTO THE BACK-UP PLATE TO FORM A COMPRESSED JOINT.

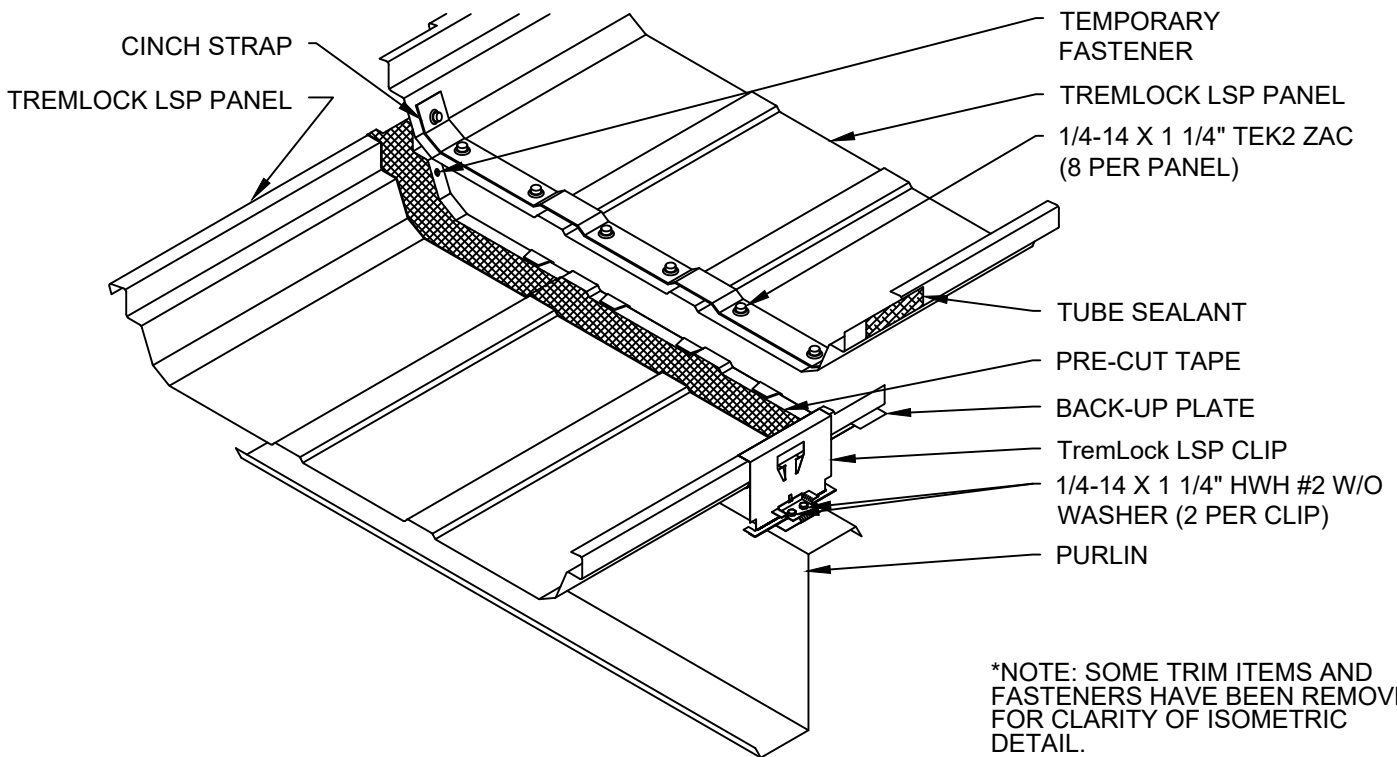

*NOTE: SOME TRIM ITEMS AND FASTENERS HAVE BEEN REMOVED FOR CLARITY OF ISOMETRIC DETAIL.



SHEET TITLE:

TREMLOCK LSP PANEL
END LAP DETAIL

SCALE:

NTS

DRAWING No.:

DWG NO. LSP-07