

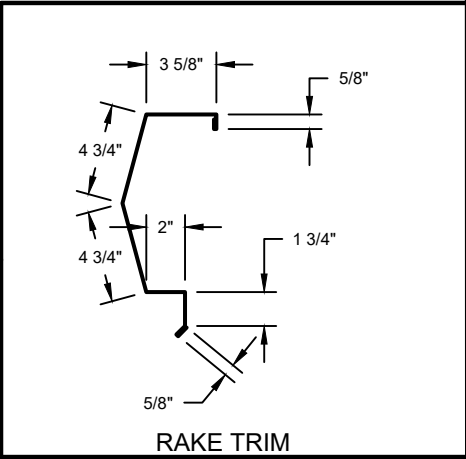


*NOTE: MALE LEG OF PANEL
MUST BE HAND FOLDED AT
RAKE END FOR PROPER
CONNECTION.

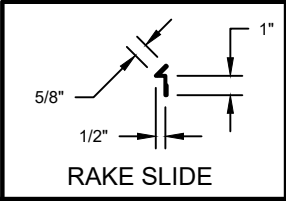

NOTES

1. Rake Support Angle to be installed flush with steel line.
2. Place roll tape on rib of roof panel.
3. Attach trim to panel with 1/4-14 x 1 1/4" Tek2 Zac fasteners @1'-0" O.C.
4. Attach Rake Slide to wall panels with 1/4-14 x 7/8" Lap/Tek fasteners.
5. Apply tube sealant to trim before lapping.
6. Pop-Rivet trim laps.

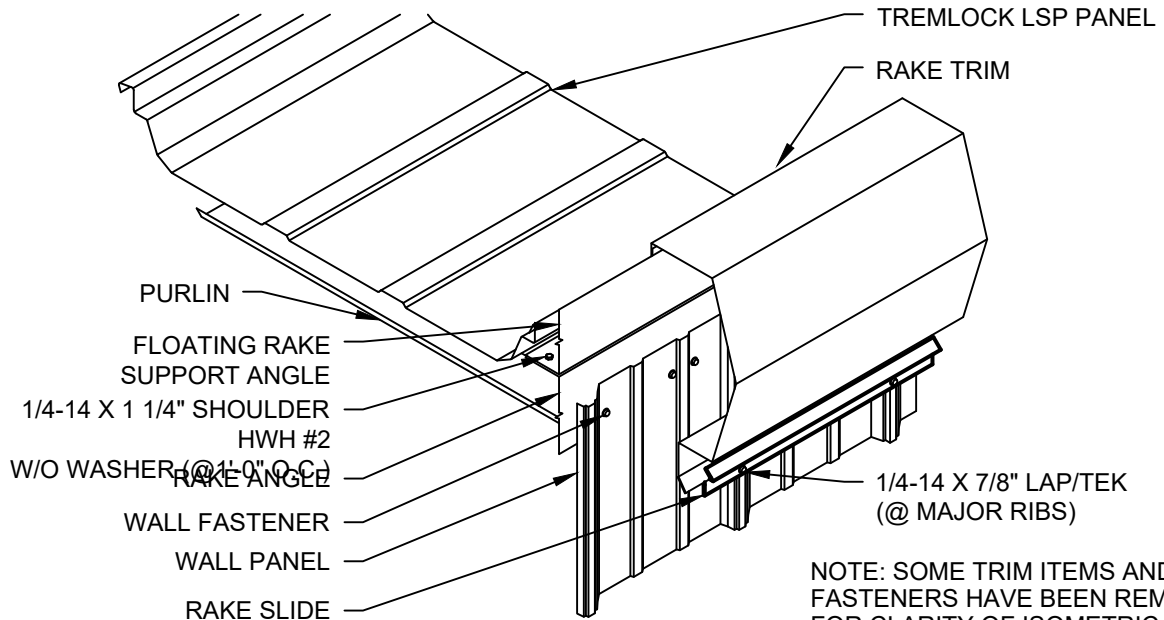

NOTE: SOME TRIM ITEMS AND
FASTENERS HAVE BEEN REMOVED
FOR CLARITY OF ISOMETRIC
DETAIL.



SHEET TITLE:

TREMLOCK LSP RAKE END
DETAIL (FLOATING)

SCALE:

NTS

DRAWING No.:

DWG NO. LSP-13