



*NOTE: SOME TRIM ITEMS AND FASTENERS HAVE BEEN REMOVED FOR CLARITY OF ISOMETRIC DETAIL.

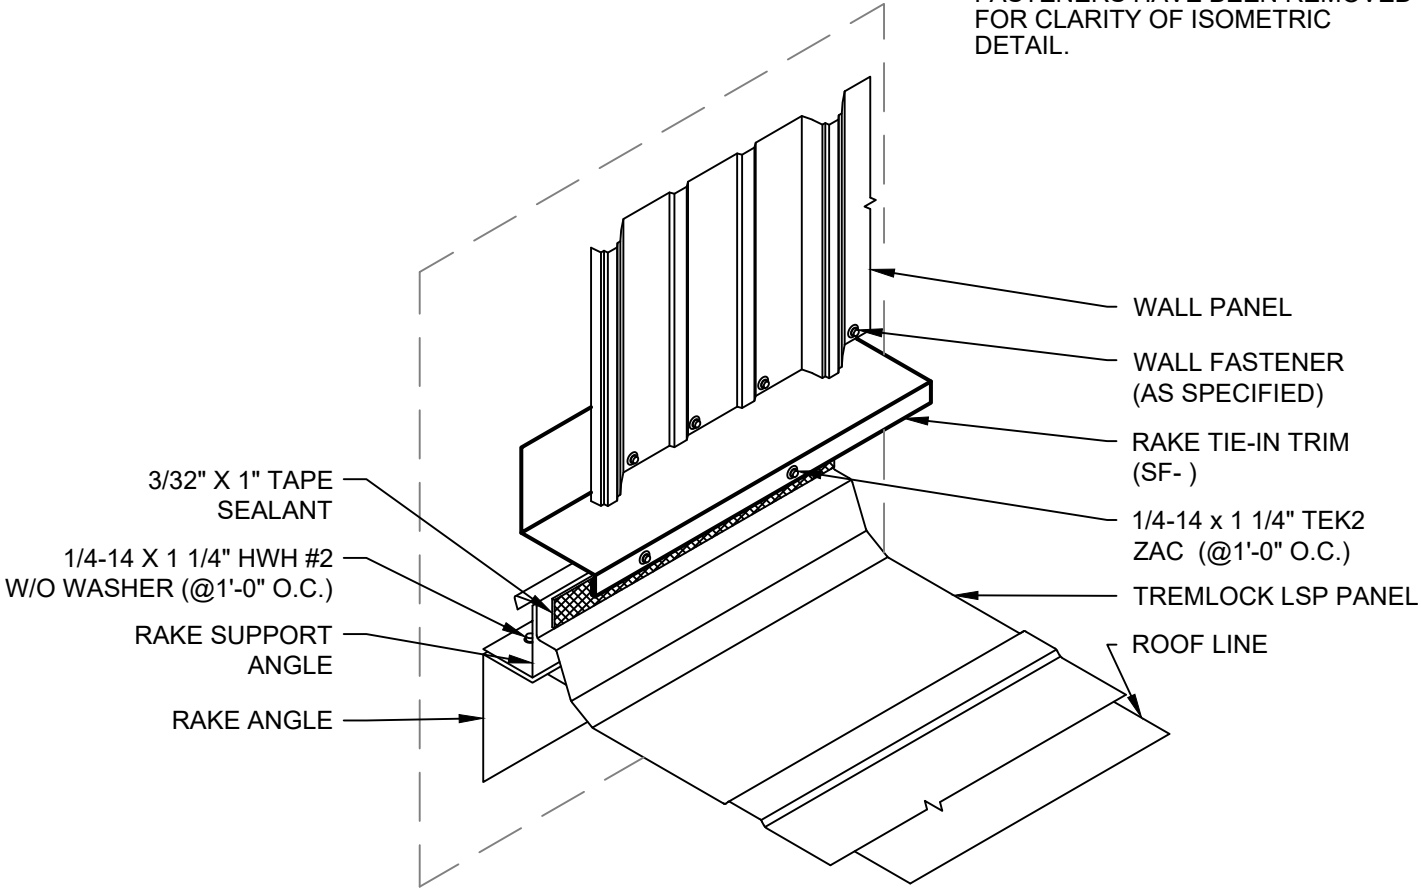

*NOTE:
1 1/2"(MIN.) TO 8" (MAX.)
DIMENSION VARIES WITH
PANEL LAYOUTS.

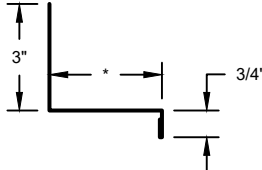

RAKE TIE-IN TRIM

NOTES

1. Attach Rake Support Angle to Rake Angle at required location with 1/4-14 x 1 1/4" Shoulder Tek2 @ 1'-0" O.C.
2. Place Roll Tape Sealant on rib of roof panel.
3. Attach Rake Tie-In Trim to Rake Support Angle with 1/4-14 x 1 1/4" Tek2 ZAC fasteners @1'-0" O.C.
4. Apply tube sealant to trim before lapping.



SHEET TITLE:
**TREMLOCK LSP RAKE START
TIE-IN DETAIL (FIXED)**

SCALE:
NTS
DRAWING No.:
DWG NO. LSP-17