


\*NOTE:  
1 1/2" (MIN.) TO 8" (MAX.)  
DIMENSION VARIES WITH  
PANEL LAYOUTS.

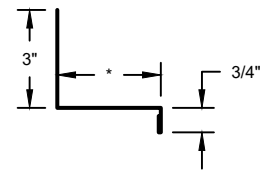

RAKE TIE-IN TRIM

## NOTES

1. ATTACH RAKE SUPPORT ANGLE TO RAKE ANGLE AT REQUIRED LOCATION WITH 1/4-14 X 1 1/4" SHOULDER TEK2 @ 1'-0" O.C.
2. PLACE ROLL TAPE ON RIB OF ROOF PANEL.
3. ATTACH RAKE TIE-IN TRIM TO SUPPORT ANGLE WITH 1/4-14 X 1 1/4" TEK2 ZAC FASTENERS @ 1'-0" O.C.
4. APPLY TUBE SEALANT TO TRIM BEFORE LAPPING.