



*NOTE: SOME TRIM ITEMS AND FASTENERS HAVE BEEN REMOVED FOR CLARITY OF ISOMETRIC DETAIL.

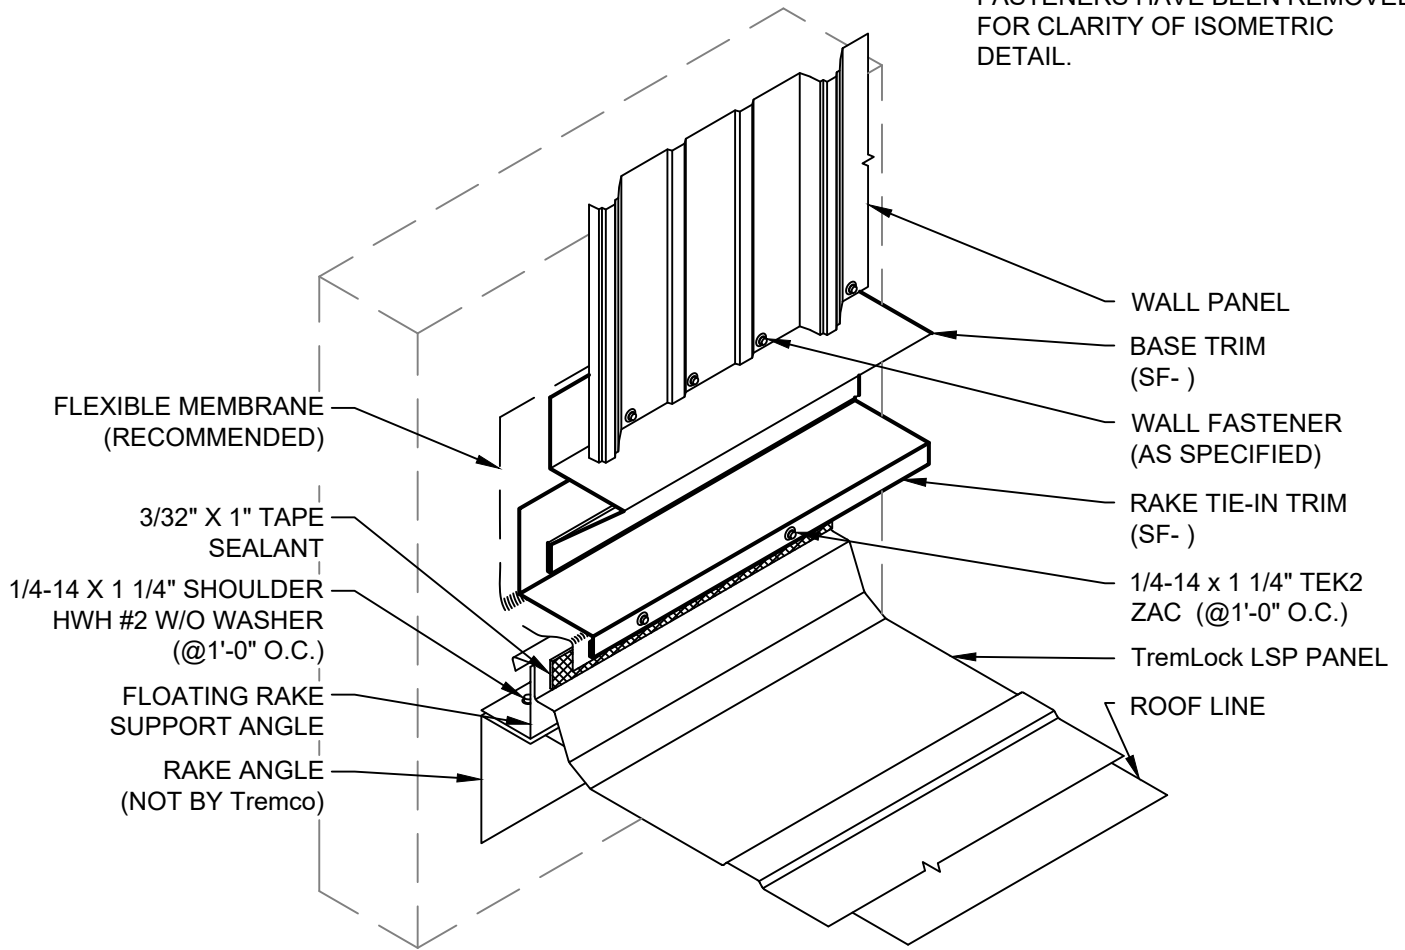

*NOTE:
1 1/2"(MIN.) TO 8"(MAX.)
DIMENSION VARIES WITH
PANEL LAYOUTS.

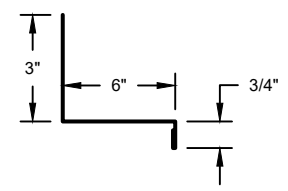

RAKE TIE-IN TRIM

NOTES

1. ATTACH RAKE SUPPORT ANGLE TO RAKE ANGEL AT REQUIRED LOCATION WITH 1/4-14 X 1 1/4" SHOULDER TEK2 @ 1'-0" O.C.
2. PLACE ROLL TAPE ON RIB OF ROOF PANEL.
3. ATTACH RAKE TIE-IN TRIM TO SUPPORT ANGLE WITH 1/4-14 X 1 1/4" TEK2 ZAC FASTENERS @ 1'-0" O.C.
4. APPLY TUBE SEALANT TO TRIM BEFORE LAPPING.



SHEET TITLE:
**TREMLOCK LSP RAKE START
TIE-IN DETAIL (FLOATING)**

SCALE:
NTS

DRAWING No.:
DWG NO. LSP-19