



**J-CHANNEL**

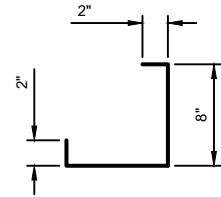

**OUTSIDE CORNER TRIM**

- NOTES:**
1. Attach J-Channel to Wall Structural Member with Framing Fasteners
  2. Install Wave Panel with Pre-Installed closures onto J-channel.
  3. Install Wave Panel Corner Cap with pop rivets at 12" o.c.

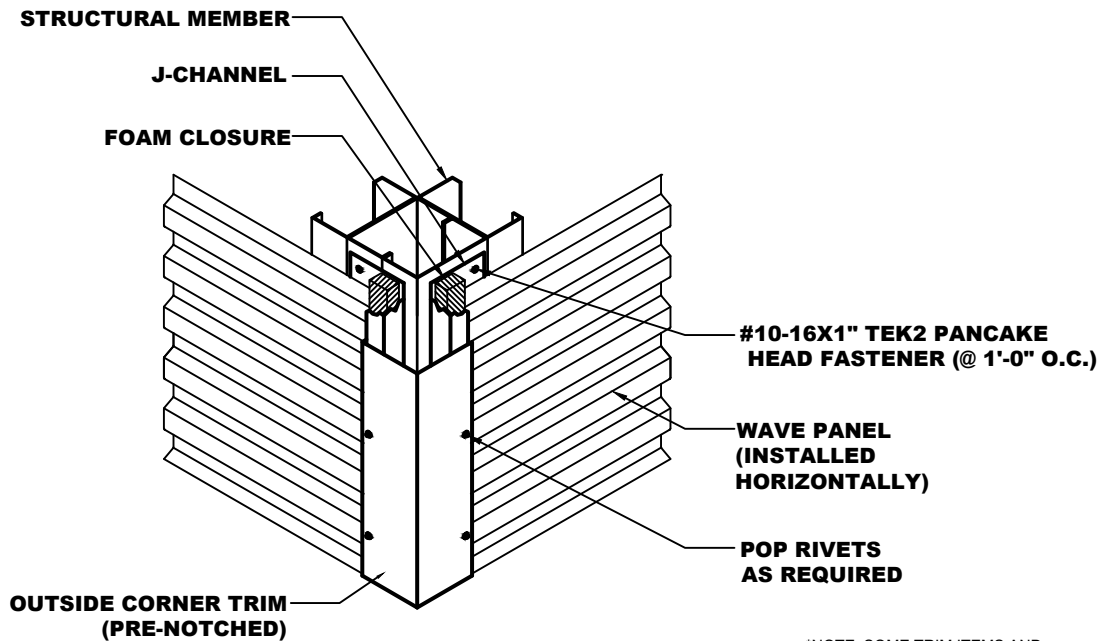

\*NOTE: SOME TRIM ITEMS AND FASTENERS HAVE BEEN REMOVED FOR CLARITY OF ISOMETRIC