


- NOTES:**
1. Locate and attach Zee Spacer Trim with #10-16 x 1" TEK2 Pancake Head fastener.
  2. Attach panels to framing with #10-16 x 1" TEK2 Pancake Head fasteners.
  3. Attach Inside Corner with Pop-Rivets @ 1'-0" O.C.

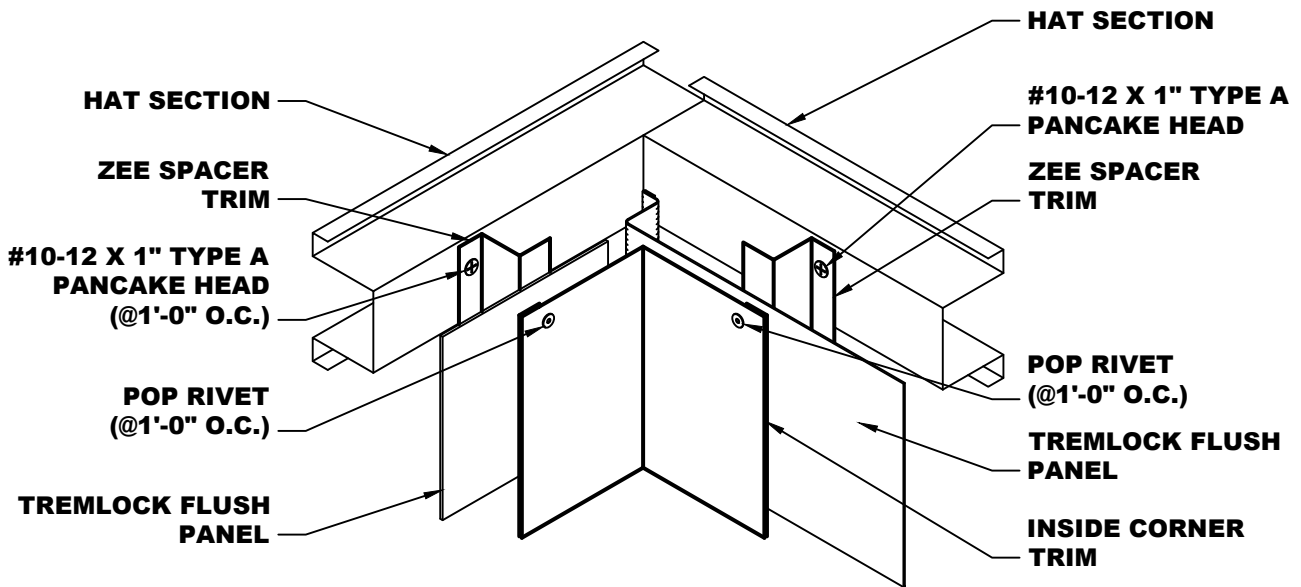

SHEET TITLE:  
TREMLOCK FLUSH PANEL  
INSIDE CORNER DETAIL

SCALE:  
NTS  
DRAWING No.:  
DWG NO. 05