

**PLYWOOD DECKING  
(NOT BY Tremco)**

**WOOD BLOCKING  
(NOT BY Tremco)**

**#10-12 X 1" TYPE A  
PANCAKE HEAD  
(@2'-0" O.C.)**


**SOFFIT J  
TRIM**

**BUILDING LINE**

**PLYWOOD SHEATHING  
(NOT BY Tremco)  
1/2" THICK (MIN.)**

**TremLock SOFFIT  
PANEL**

**#10-12 X 1" TYPE A  
PANCAKE HEAD**

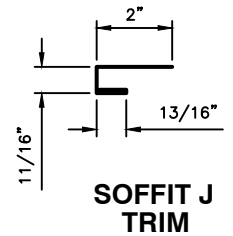

- NOTES:**
1. Trim to start and end at building lines.
  2. Attach trim to blocking with #10-12 x 1" Type A Pancake Head at 2'-0" O.C.
  3. Attach panel to sheathing with #10-12 x 1" Type A Pancake Head.

**BUILDING LINE**

**WOOD BLOCKING  
(NOT BY Tremco)**

**#10-12 X 1" TYPE A  
PANCAKE HEAD  
(@2'-0" O.C.)**

**#10-12 X 1" TYPE A  
PANCAKE HEAD**

**SOFFIT J  
TRIM**

**PLYWOOD DECKING  
(NOT BY Tremco)**

**PLYWOOD SHEATHING  
(NOT BY Tremco)  
1/2" THICK (MIN.)**

**TremLock SOFFIT  
PANEL**



SHEET TITLE:

TREMLOCK SOFFIT DETAIL

SCALE:

NTS

DRAWING No.:

DWG NO. 07