


1 PIECE METHOD

CURB OR WALL
 REINFORCED TPO MEMBRANE
 ONE PIECE FOLD WITH PIG EAR (DO NOT CUT) ALL SEGMENTS MUST BE WELDED DOWN
 TPO T-JOINT PATCH AT MEMBRANE OVERLAP
 HEAT-WELDED LAP
 REINFORCED TPO MEMBRANE (PERIMETER SHEET IF REQUIRED)

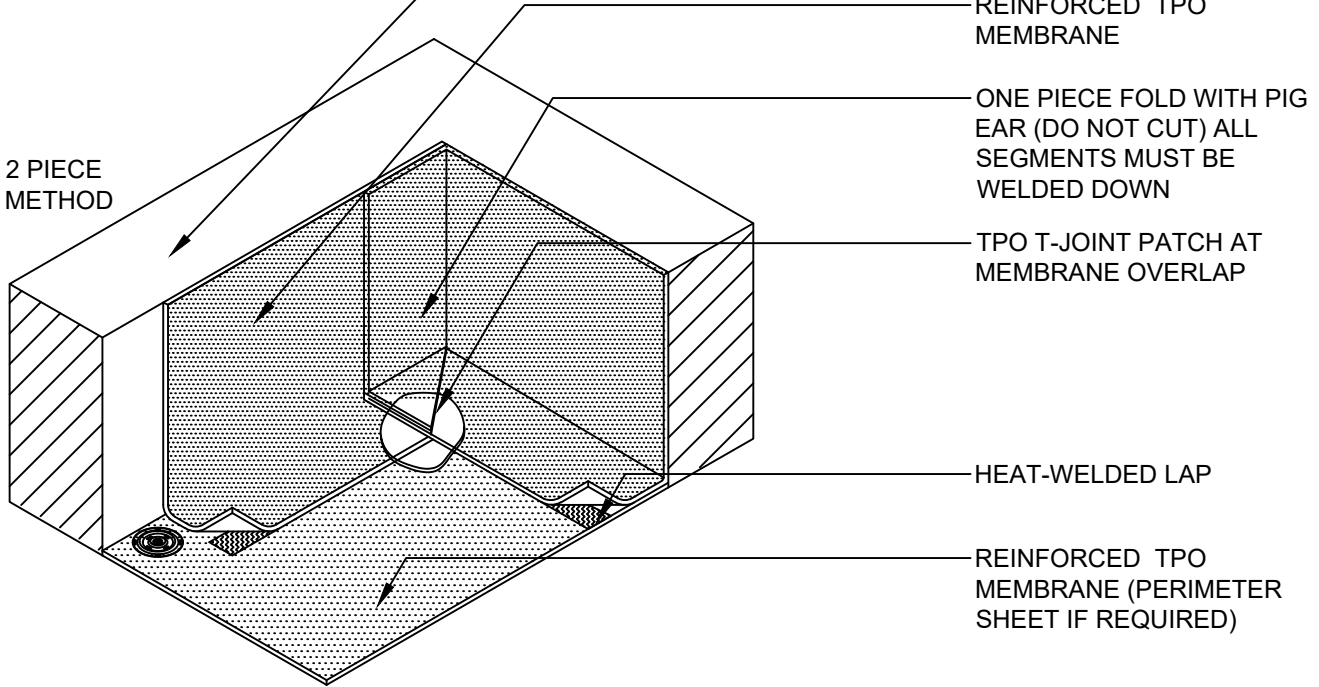

2 PIECE METHOD

CURB OR WALL
 REINFORCED TPO MEMBRANE
 ONE PIECE FOLD WITH PIG EAR (DO NOT CUT) ALL SEGMENTS MUST BE WELDED DOWN
 TPO T-JOINT PATCH AT MEMBRANE OVERLAP
 HEAT-WELDED LAP
 REINFORCED TPO MEMBRANE (PERIMETER SHEET IF REQUIRED)

NOTES

1. ALL SEGMENTS OF THE EAR MUST BE WELDED TOGETHER AND WELDED TO THE WALL
2. CHECK SYSTEM SPEC FOR GUIDELINES ON ADHERING FLASHINGS.
3. FOR INSULATION THICKNESS GREATER THAN 8" (203 mm), A HARD BOARD IS REQUIRED ON MECHANICAL SYSTEMS ONLY.
4. IF TPO MEMBRANE IS USED, BONDING ADHESIVE IS NOT NEEDED AND WALL MUST BE PRIMED.
5. APPLY TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES.



SHEET TITLE:
 INSIDE CORNER FABRICATION -
 "PIG EAR" DOWN DETAIL

SCALE:
 NTS
 DRAWING No.:
 DWG NO. 50