



ALTERNATE INSTALLATION

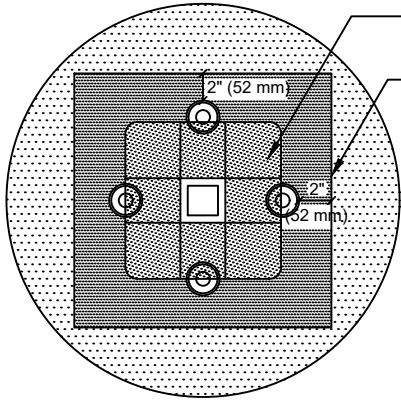

SEE NOTE #1

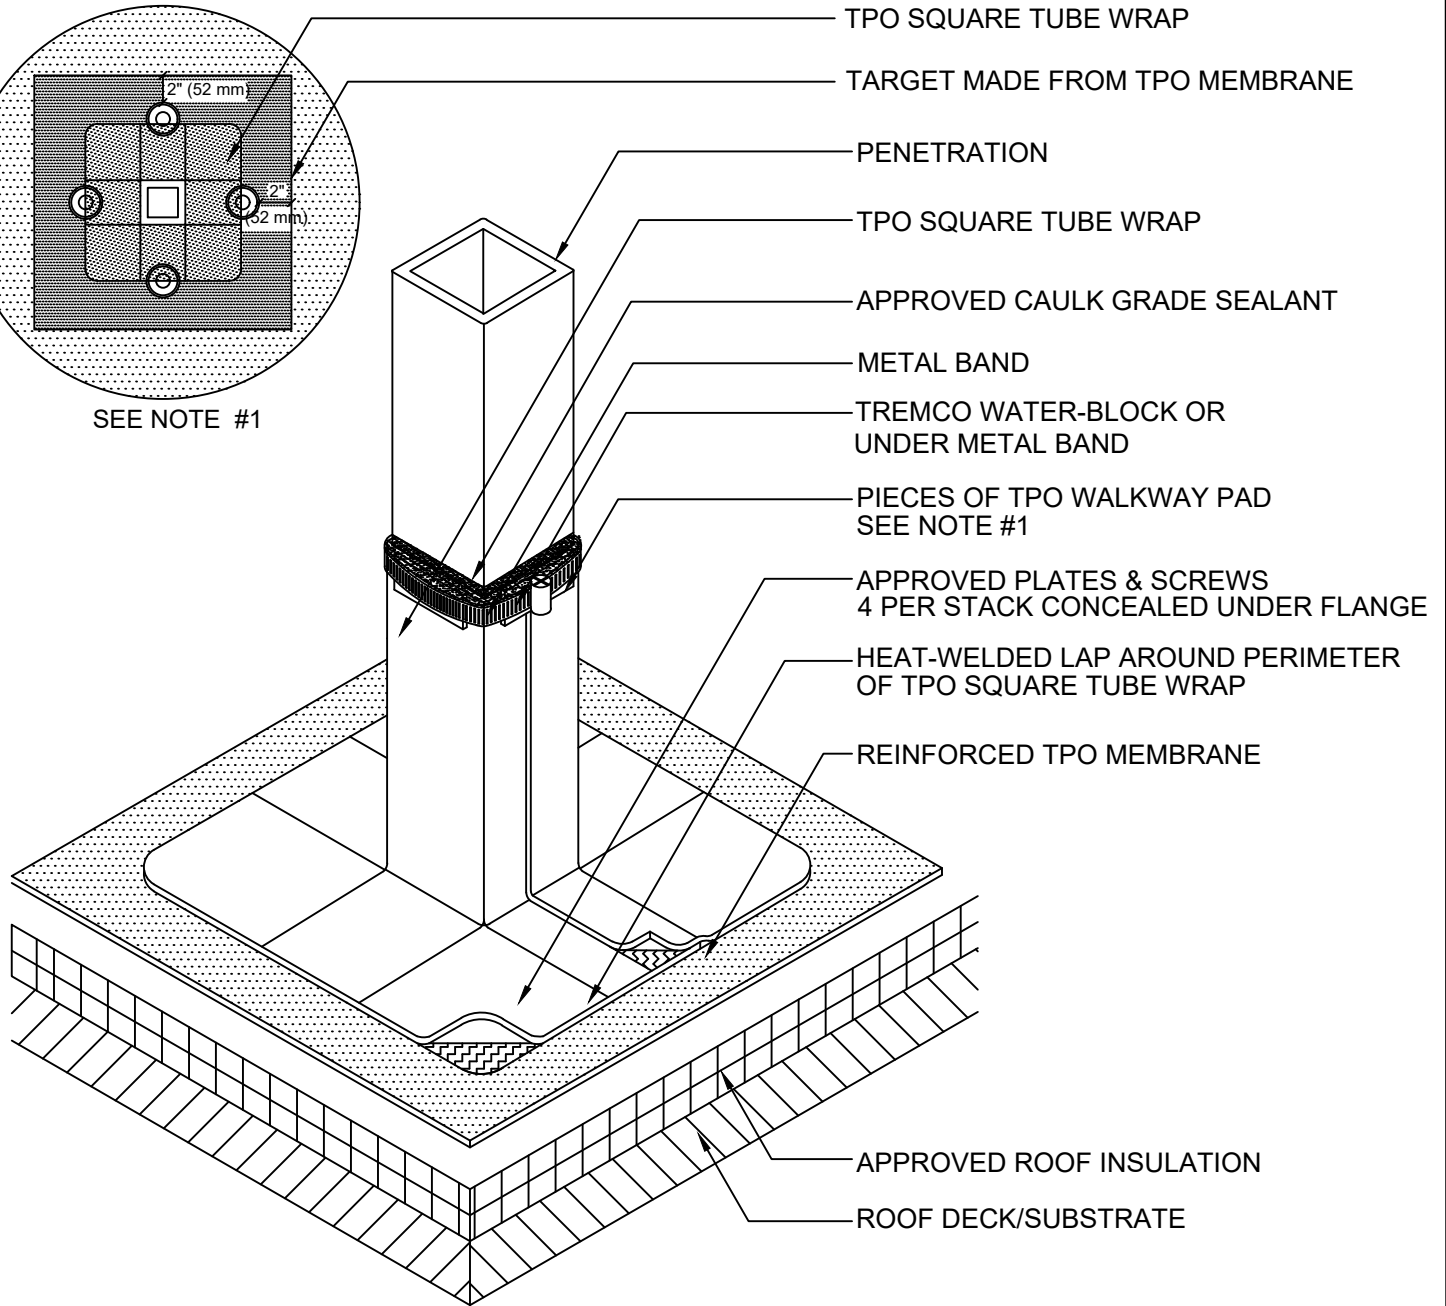

NOTES

1. IF A TIGHTER FIT IS REQUIRED AT THE TOP OF THE WRAP, INSERT SLIVERS OF WALKWAY PAD BETWEEN THE BAND AND THE MEMBRANE ON ALL FOUR SIDES.
2. IF PLATES AND FASTENERS ENCROACH INTO THE SEAM AREA OF THE POCKET, THEN A TARGET MUST BE ADDED FIRST TO COVER FASTENERS.
3. APPLY TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES.



SHEET TITLE:

SQUARE TUBE WRAP DETAIL

SCALE:

NTS

DRAWING No.:

DWG NO. 82