


- VR RootBloc wrap up vertically and secure to vent sidewall with VR TecTape 2
- Leave 24" (61 cm) clearance around vents and fill with gravel
- VR EdgeGuard 4
- Secure VR Filter Fabric to VR EdgeGuard 4 with VR FabricLok
- Fill with growing media
- VR Mod, pre-vegetated Module
- Secure VR Filter Fabric to bottom section of VR Mod sidewall with VR FabricLok
- VR HydraPanel 0.40

Typical vent

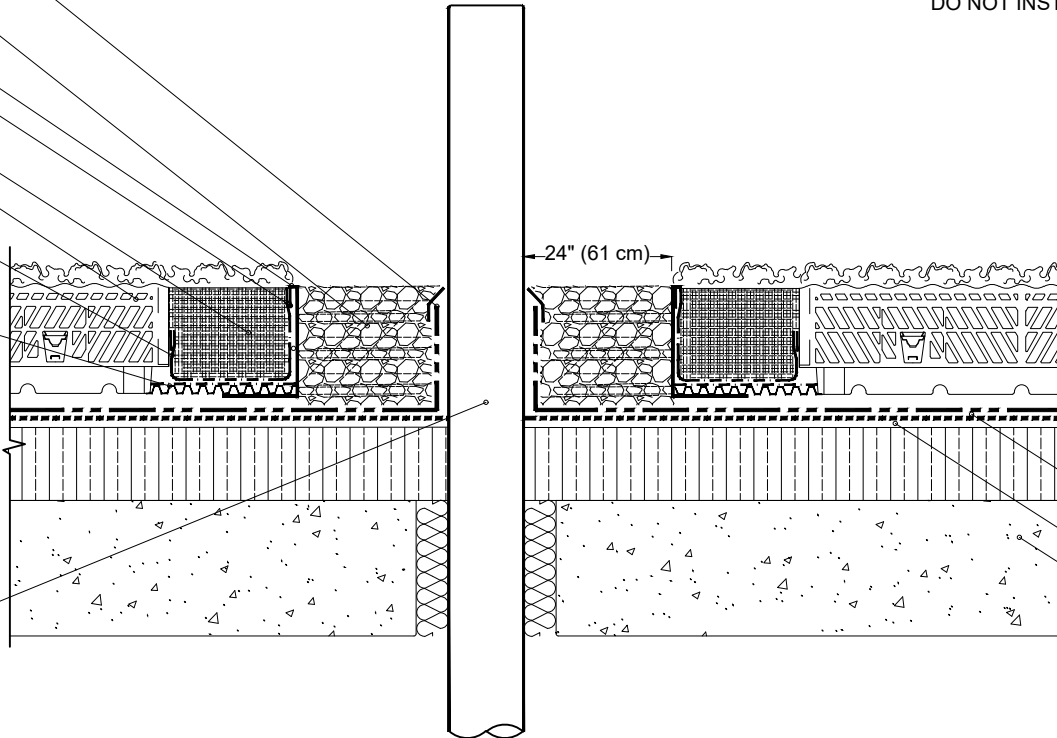

NOTE:  
 USE THIS DETAIL WHEN USE OF FULL  
 MODULE IS NOT POSSIBLE.  
 ONLY FULL MODULES ARE TO BE USED.  
 DO NOT INSTALL PARTIAL MODULES.

- VR RootBloc root barrier (May not be required)
- Typical roof system assembly
- Typical roof deck