

NOTE:
 USE THIS DETAIL WHEN USE OF FULL MODULE IS NOT POSSIBLE.
 ONLY FULL MODULES ARE TO BE USED.
 DO NOT INSTALL PARTIAL MODULES.

VR RootBloc wrap up vertically
 and secure to vent sidewall with
 VR TecTape 2

Leave 24" (61 cm) clearance
 around vents and fill with gravel
 VR EdgeGuard 4

Secure VR Filter Fabric to VR
 EdgeGuard 4 with VR FabricLok


Fill with growing media

Secure VR Filter Fabric to
 bottom section of VR Mod
 sidewall with VR FabricLok

VR Mod, pre-vegetated Module

VR HydraPanel 0.40

Typical roof drain

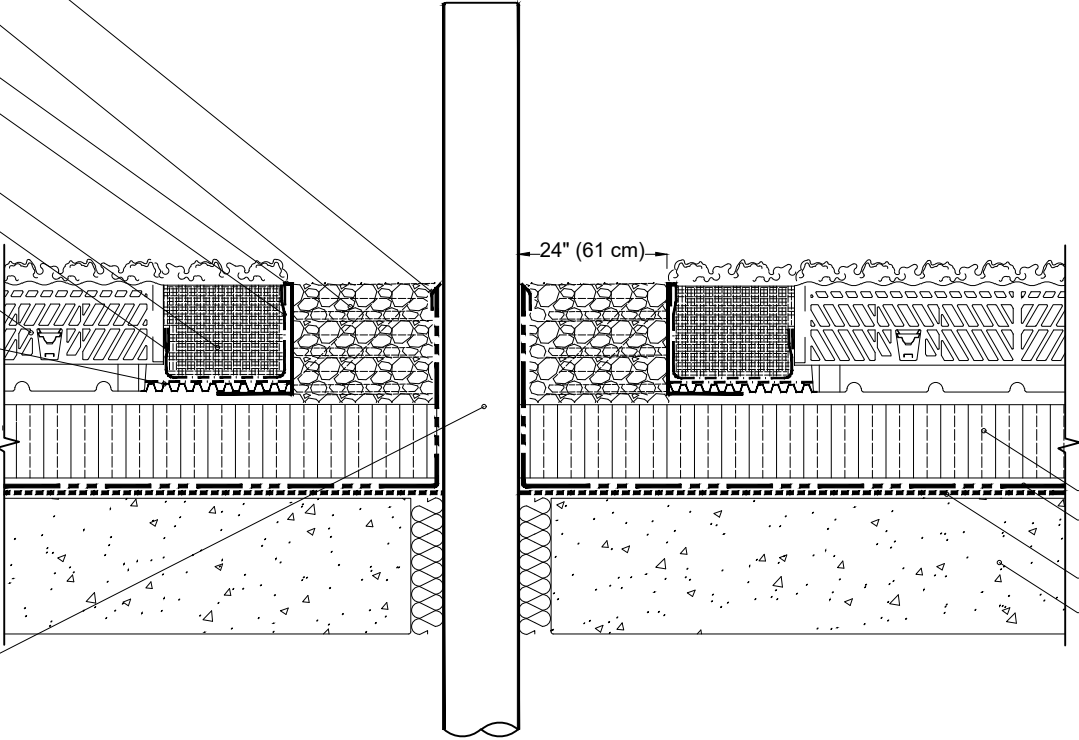

Typical polystyrene rigid insulation
 VR RootBloc root barrier
 (May not be required)
 Typical roof system assembly
 Typical roof deck



SHEET TITLE:

VR MOD 1 INVERTED, ROOF PENETRATION

SCALE:

NTS

DRAWING No.:

DWG NO. M11-06