


- VR RootBloc wrap up vertically and secure to vent sidewall with VR TecTape 2
- Leave 24" (61 cm) clearance around vents and fill with gravel
- VR EdgeGuard 2
- Secure VR Filter Fabric to VR EdgeGuard 2 with VR FabricLok
- Fill with growing media
- VR Mod 2, pre-vegetated Module
- Secure VR Filter Fabric to bottom section of VR Mod 2 sidewall with VR FabricLok
- VR HydraPanel 0.40

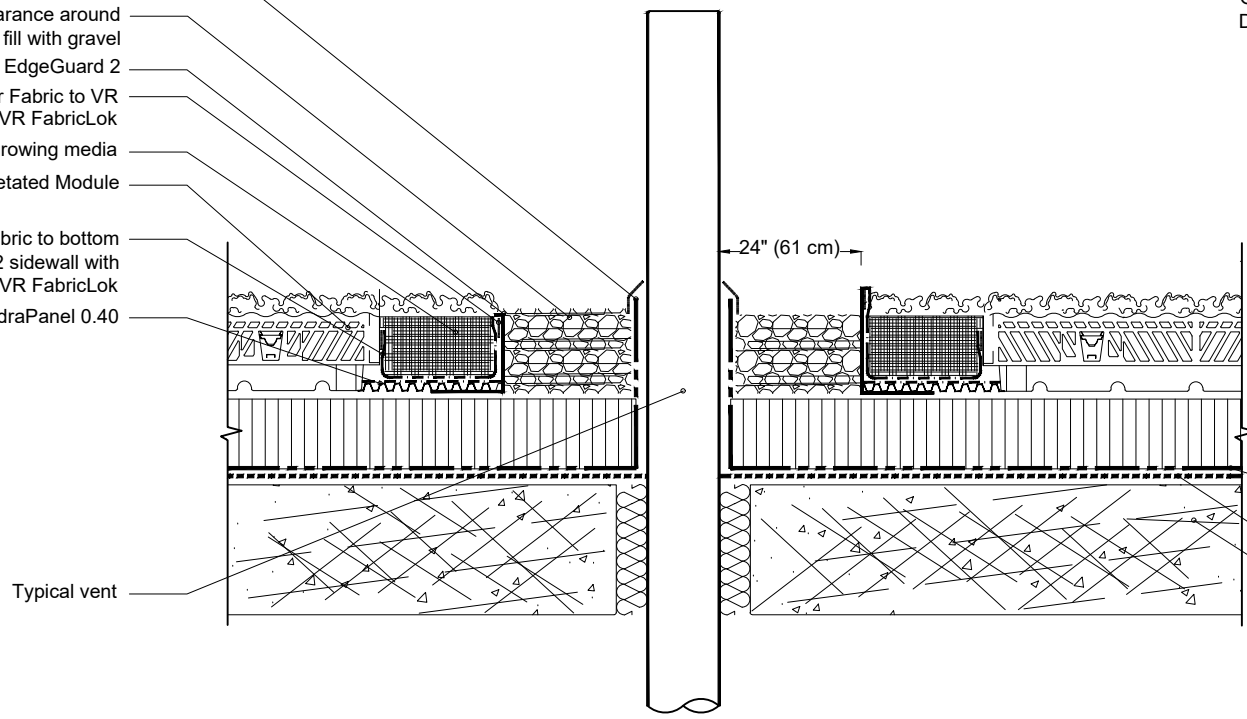

NOTE:
 USE THIS DETAIL WHEN USE OF FULL MODULE IS NOT POSSIBLE.
 ONLY FULL MODULES ARE TO BE USED.
 DO NOT INSTALL PARTIAL MODULES.

- VR RootBloc root barrier (May not be required)
- Typical roof system assembly
- Typical roof deck



SHEET TITLE:
 VR MOD 2 INVERTED, ROOF PENETRATION

SCALE:
 NTS
 DRAWING No.:
 DWG NO. M2I-05