


## **Flat Corrugated** December 21, 2016; Revision B

### **SINGLE PANEL:**

- 40" X 64"
- Part Number BW501023

### **DOUBLE PANEL:**

- 40" X 128"
- Part Number BW501052

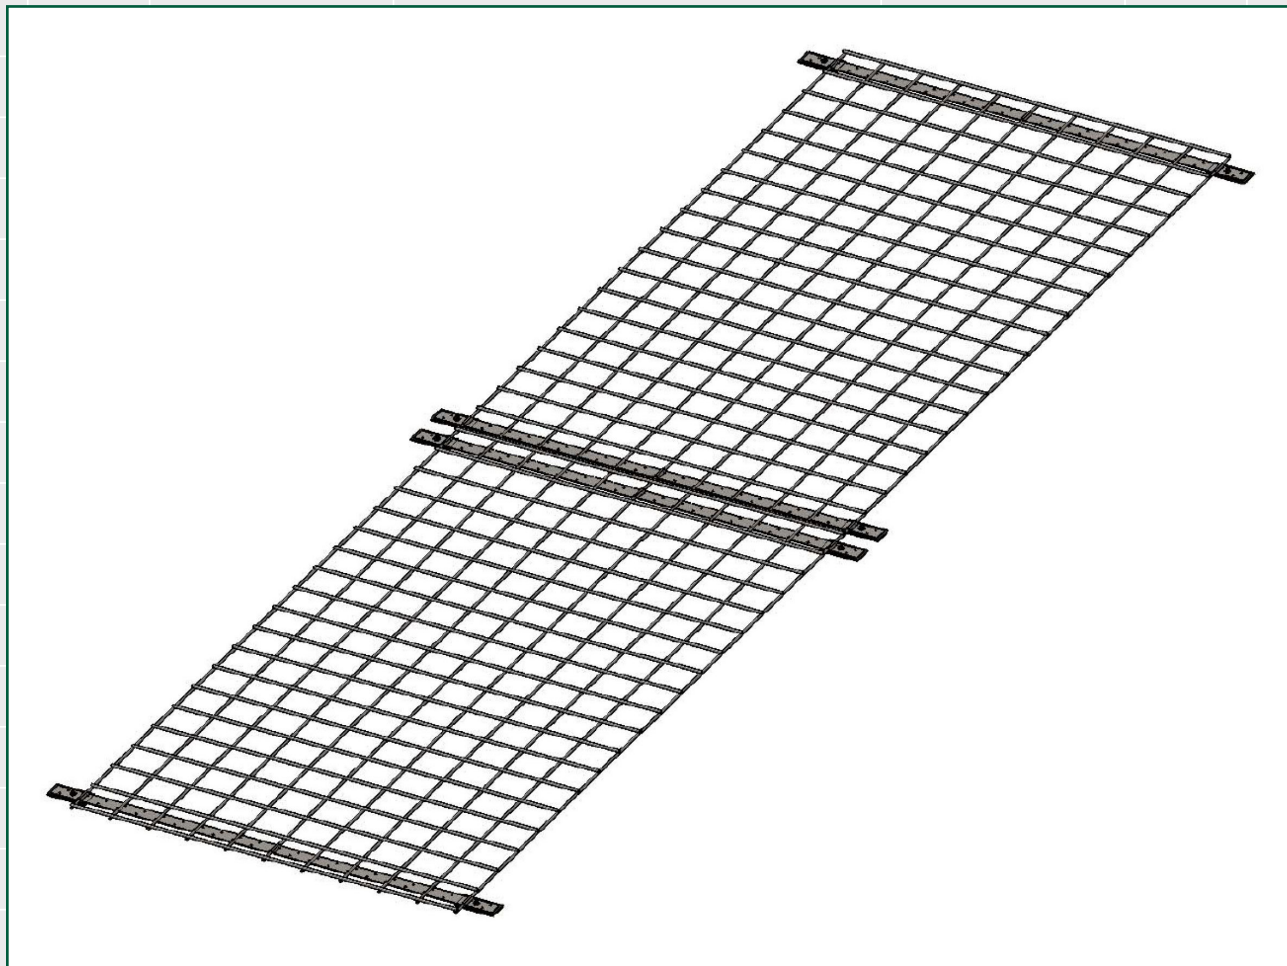


### **ANNUAL INSPECTION PROCEDURE:**


- Verify that all fasteners are tightened.
- Replace any missing fasteners.
- Inspect screen for damage. Replace if damage is found.

## Flat Corrugated December 21, 2016; Revision B

### INSTALLATION PROCEDURE:

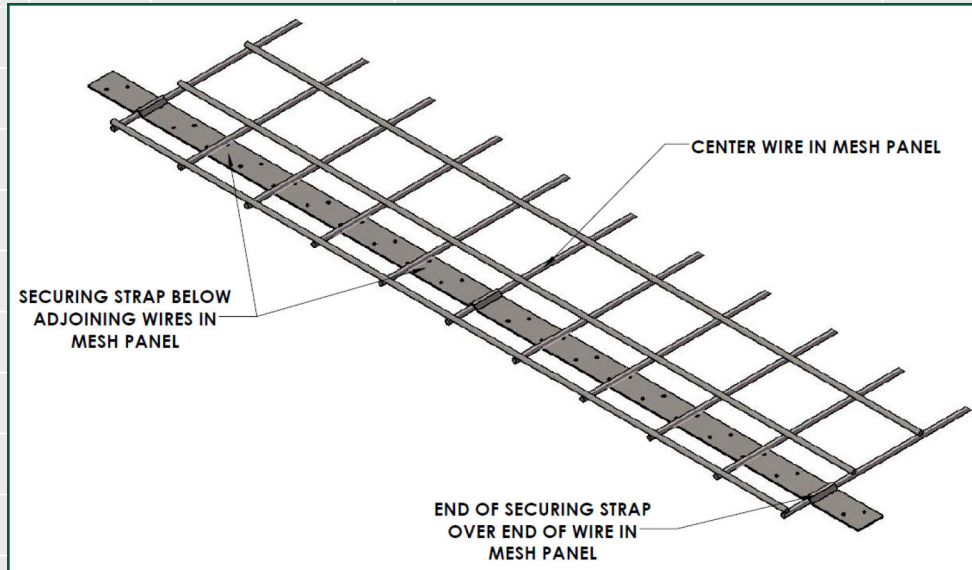


1. Insert the securing strap into the wire mesh panel.
  - a. PLEASE NOTE: the straps must be inserted into the ends of the wire mesh panel.
  - b. Feed strap upward at an angle around the center wire in the panel.
  - c. Adjust the end as the strap is being fed to go under the adjacent wire on the panel.
  - d. Adjust the strap as necessary to ensure that the bend in the strap is on the wire of the mesh panel.
2. Pull one end to the edge of the mesh and feed it over the wire in the panel.
  - a. Please note: from the center wire to the end, the strap must be below all adjoining wires on the panel.
3. Repeat steps 1 and 2 until the four straps are inserted into the two mesh panels.

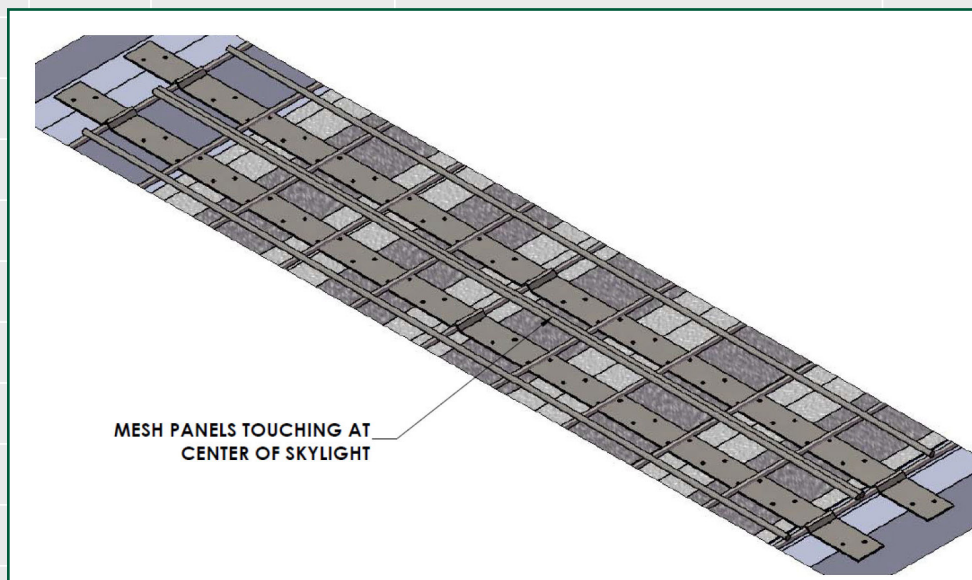


4. Center the panels over the skylight.
  - a. Ensure that the 2 mesh panels are touching at the center of the skylight.

## Flat Corrugated December 21, 2016; Revision B

### INSTALLATION PROCEDURE: (continued)

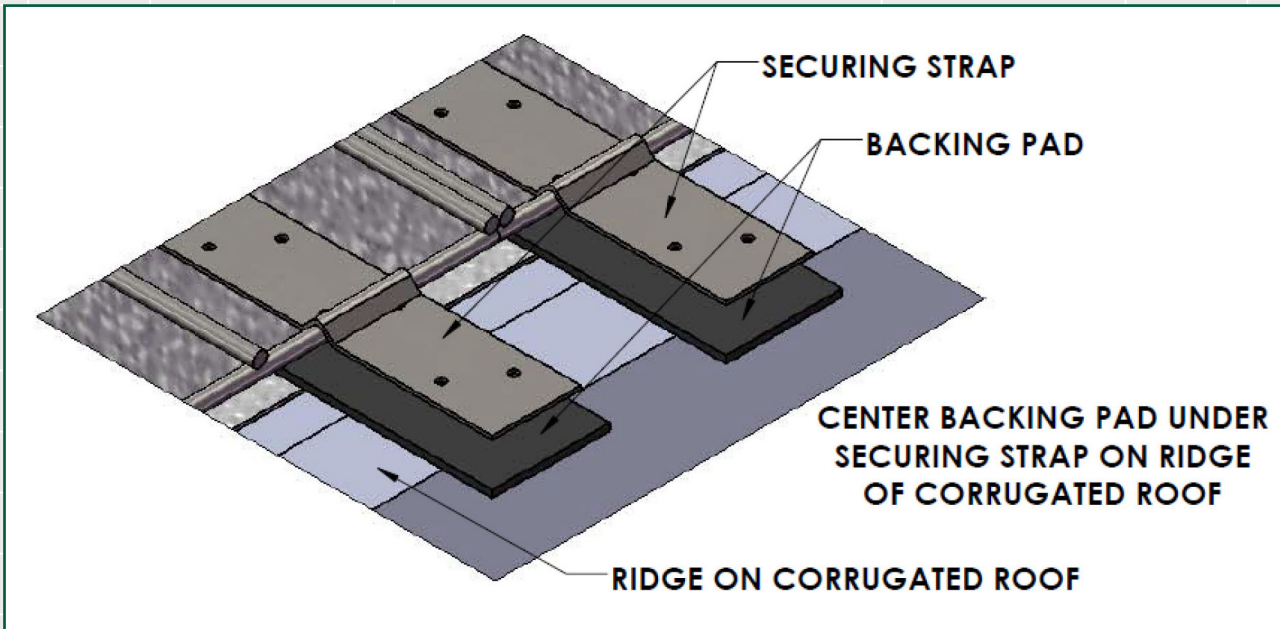

5. Place the pads under each of the ends of the securing straps on the ridge of the corrugated roof.

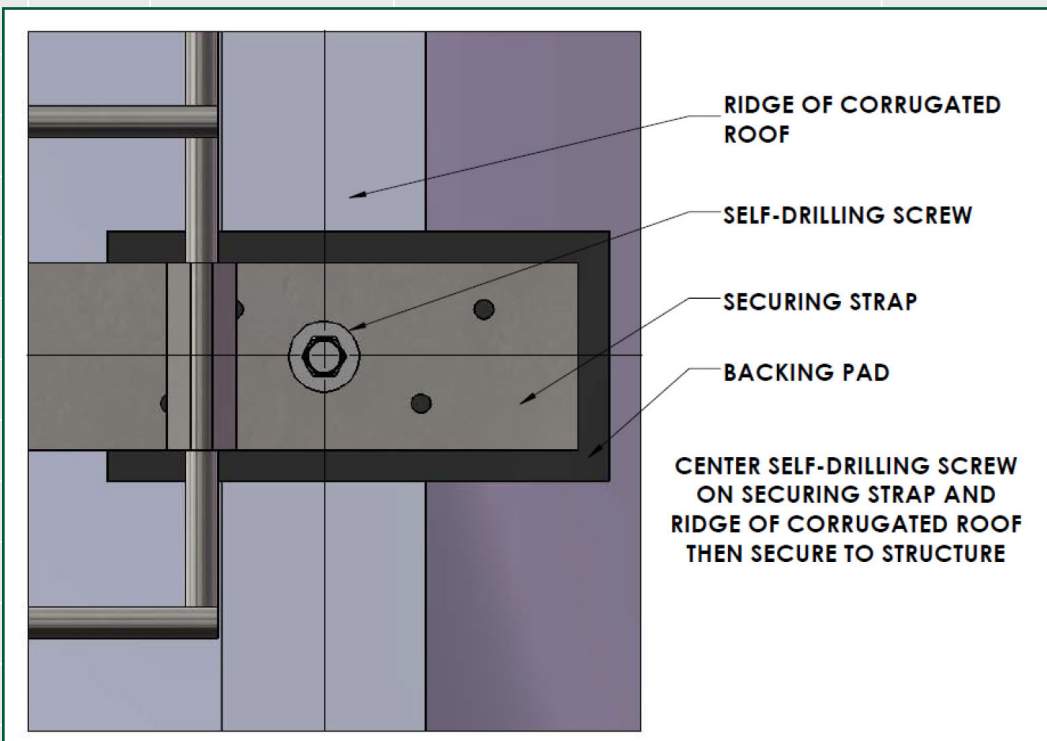

6. Center a self-drilling screw on the securing strap and the ridge of the corrugated roof.
  - a. PLEASE NOTE: the self-drilling screw does not need to be placed into an existing hole on the securing strap.
7. Secure the self-drilling screw to the flat skylight guard and the corrugated roof.
8. Repeat steps 6 and 7 as necessary until flat skylight guard is fastened to the corrugated roof in eight places.